

**AUCKLAND****ARRIVAL/DEPARTURE (1) — ALL RWY****CAUTION**

***There are 2 modes of operation for Auckland International Airport.  
The procedures applicable to each mode of operation  
are presented as follows:***

- RWY 05R/23L Normal Operations — refer to WHITE pages
- RWY 05R/23L Runway WIP (displaced thresholds — reduced lengths)  
— refer to YELLOW pages

**Notice of planned activation of RWY WIP East or West will be  
by NOTAM at least 24 hrs in advance. The active RWY mode and  
associated AIP colour pages will be broadcast on the Auckland ATIS**

Procedures applicable to operations on all RWY are annotated "ALL RWY"  
— refer to WHITE pages

***Active RWY Identification During Daylight***

To ensure correct RWY identification during daylight hours, the active RWY will be identified by sequenced strobes and/or REIL as shown in the table below.

RWY	Identification Lighting
05R/23L (Normal Operations)	3 sequenced strobes REIL
05R/23L (Runway WIP)	3 sequenced strobes REIL

***Restrictions and Limitations***

- Operations by non-scheduled general aviation aircraft require specific prior written approval from the airport operator, Attn: Manager of Airside Operations. (Approval shall include but not be limited to a requirement that an authorised Aircraft Ground Handler be used — see NZAA AD 2.4).
- Flying training shall not be carried out between 2300 and 0600 without specific approval from the Airport Operator — Attn: Manager of Airside Operations.
- During any airport emergency, aircraft operations are restricted without specific approval from the Airport Operator — Attn: Manager of Airside Operations. This includes landing, take-off, operations in the manoeuvring area and flying in the vicinity, within 1.0NM of the control tower (or emergency location) and below 1000 feet.
- The only area approved for helicopter operations is the international helipad (to the north of the international terminal). Helicopters requiring to operate anywhere else at the airport require prior approval from the Airport Operator — Attn: Apron Tower.
- RWY 05R/23L will normally be closed for maintenance Monday mornings between 0130 and 0430 LMT (Sunday 1330 to 1630 UTC or Sunday 1230 to 1530 during NZDT). Aircraft operations will normally be prohibited between these hours and operators should not plan scheduled services. When circumstances allow the runway to remain open a NOTAM will be issued advising the closure is cancelled or the time of closure is amended and different from those above.

